



1.

Insert the drip irrigation pipe into the **BLUELITE-COVER**.

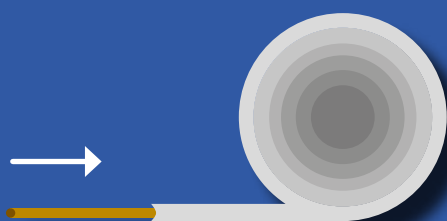

2.

Unroll the LITE-NET on the ground and stretch it up to 4 times its width.

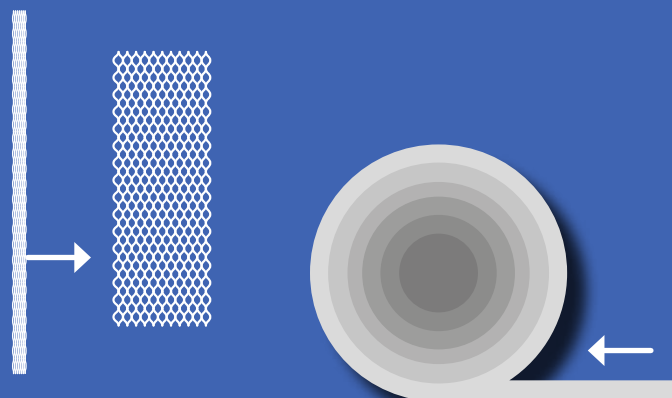

3.

Lay the protected irrigation pipe in S-shape and with 50-60 cm distance between each section on the LITE-NET and cover with 15-20 cm soil.

