



- 1.** Insert the drip irrigation pipe into the **BLUELITE-COVER**.

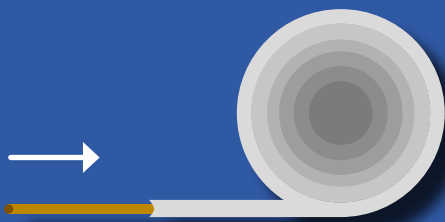

- 2.** Roll out the LITE-NET on the slope, horizontally (a.) or vertically (b.).

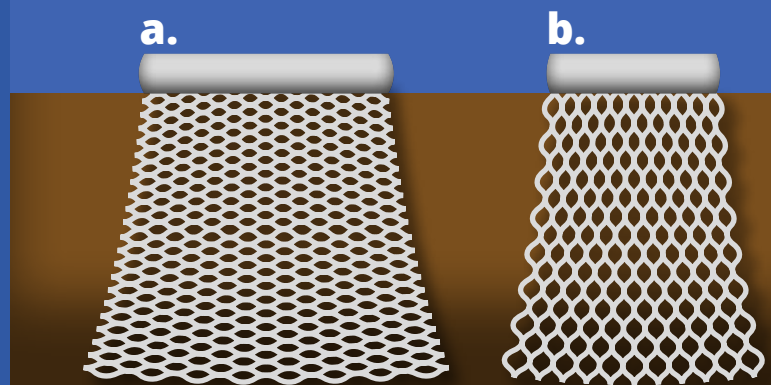

- 3.** Lay the covered irrigation pipe in S-shape with 1 m distance between each section in direct contact with the LITE-NET.



- 4.** Cover the slope with 5-10 cm soil. Please note that the LITE-NET has to be in proximity to the surface at the foot of the slope!

