


LITE-STRIPS and LITE-NET as water storage and distribution systems close to the roots:

Lay the LITE-**NET** over the entire surface of the ground and apply a layer of soil deep into the roots.
In case of non-optimal soils, additionally mix in approx. 0.5 - 1 l/m² of LITE-**STRIPS**, e.g. with a rake or rotary tiller.

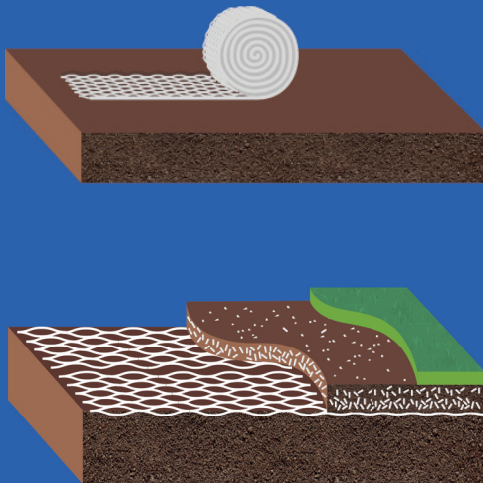

In the case of existing turf, e.g. soccer pitches, you can also remove the topsoil only from heavily used areas such as the goal areas, lay the LITE-**NET** and reapply the topsoil.




LITE-**STRIPS** can be installed subsequently, e.g. with a slot milling machine.


Applications: Athletic fields, lawns, slopes, roof greening

BLUELITE-NET for active underground irrigation:

1. Unroll the LITE-**NET** onto the floor and pull it apart to about 4 times its width.

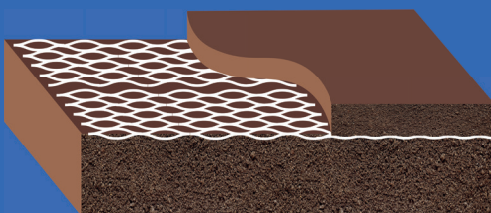

2. Lay the nonwoven-protected irrigation pipes directly on top at a distance of 50-60 cm. For smaller areas, the pipes are laid in an S-shape, for larger areas with stub pipes. You can use either the ready nonwoven-covered irrigation pipe **BLUELITE-TUBE** or the **BLUELITE-COVER** nonwoven cover, into which you insert your own irrigation tube.

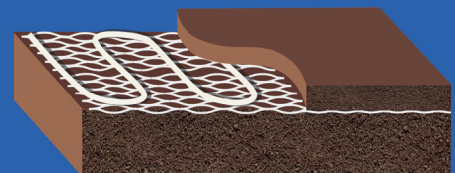

3. Pour a mixture of soil and LITE-**STRIPS** (approx. 0.5 - 1 l/m²) root-deep, level and sow or plant - done!

