
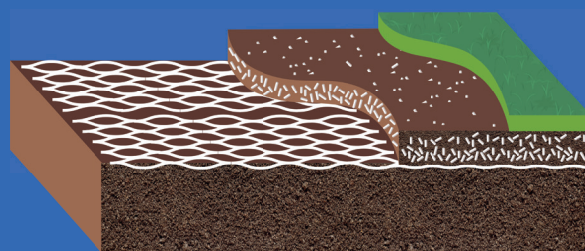


**LITE-STRIPS** and **LITE-NET** as water storage and distribution systems close to the roots:

Lay the **LITE-NET** over the entire surface on a layer of soil and apply root-deep soil over it.

In case of non-optimal soils or locations or in case of thicker structures, additionally mix in approx. 0.5 - 1 l/m<sup>2</sup> of **LITE-STRIPS**.

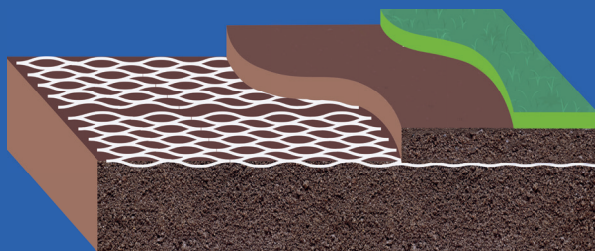


**LITE-STRIPS**, **LITE-NET** and **BLUELITE-NET** for long - term greening:

1. Either use the **BLUELITE-TUBE** nonwoven covered irrigation tube or insert your own drip irrigation tube into the **BLUELITE-COVER** non-woven covering.



2. Spread out the **LITE-NET** water distribution net over the entire surface and lay the nonwoven-covered irrigation tubes directly on top of it at a distance of 50-60 cm. Pour a mixture of soil and **LITE-STRIPS** (approx. 0.5 - 1 l/m<sup>2</sup>) root-deep, level and sow or plant - done!

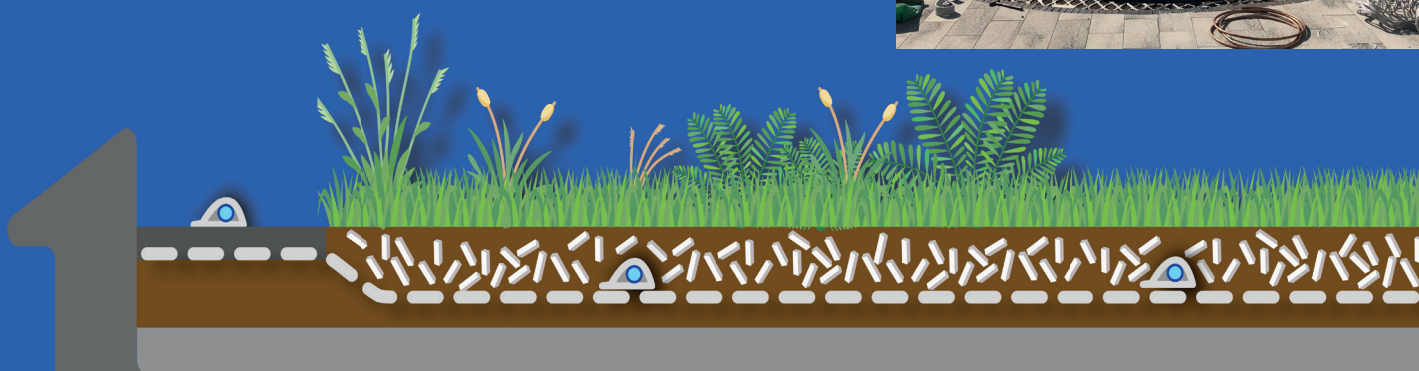

Alternatively, you can fix the nonwoven-covered irrigation tubes superficially on or in a layer of gravel. Disadvantages: UV attack, mechanical damage. Advantages: Easy control and replaceability.