


LITE-NET laid on the surface for the vegetation phase:

1. Unroll the LITE-**NET** horizontally or in the direction of fall and pull it apart to approx. 3 - 4 times its width.
2. After fixing the biodegradable LITE-**NET** variants, it is best to cover them with spray greening- ready is the root-opened water storage with erosion protection.



For slopes from approx. 30°, fasten the LITE-**NET** with earth hooks, from approx. 45° by means of a binding trench.

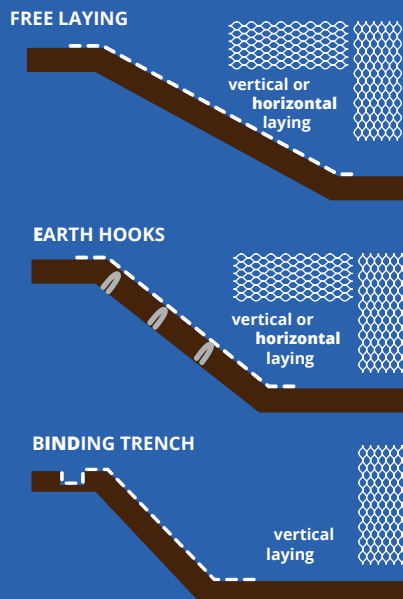

LITE-STRIPS, LITE-NET and BLUELITE-NET for long-time greening:

Lay the LITE-**NET** fully flush at root depth and/or mix approx. 0.5 - 1 l/m² LITE-**STRIPS** into the soil layer above.

For automatic water supply with the **BLUELITE-NET** system, fix the nonwoven irrigation tubes across the fall direction - directly on a LITE-**NET** laid on the full surface at the root depth - at a distance of approx. 100 cm.

